

## 1. Instruction manual


### 1.7 Ejector

ejector pump.

CAP:  $42 \text{ m}^3/\text{h}$

Inlet pressure min: 4.8 bar


outlet pressure: 0.8 bar.

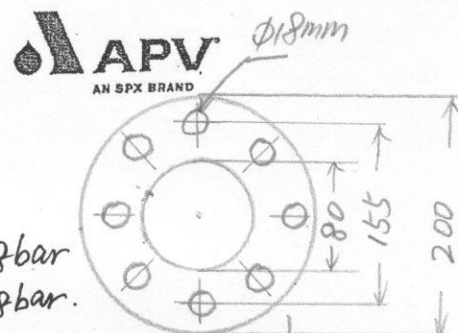

To order any spare parts it is necessary to state the ejector-number for instance

790mm

Exampel 132 6 2707

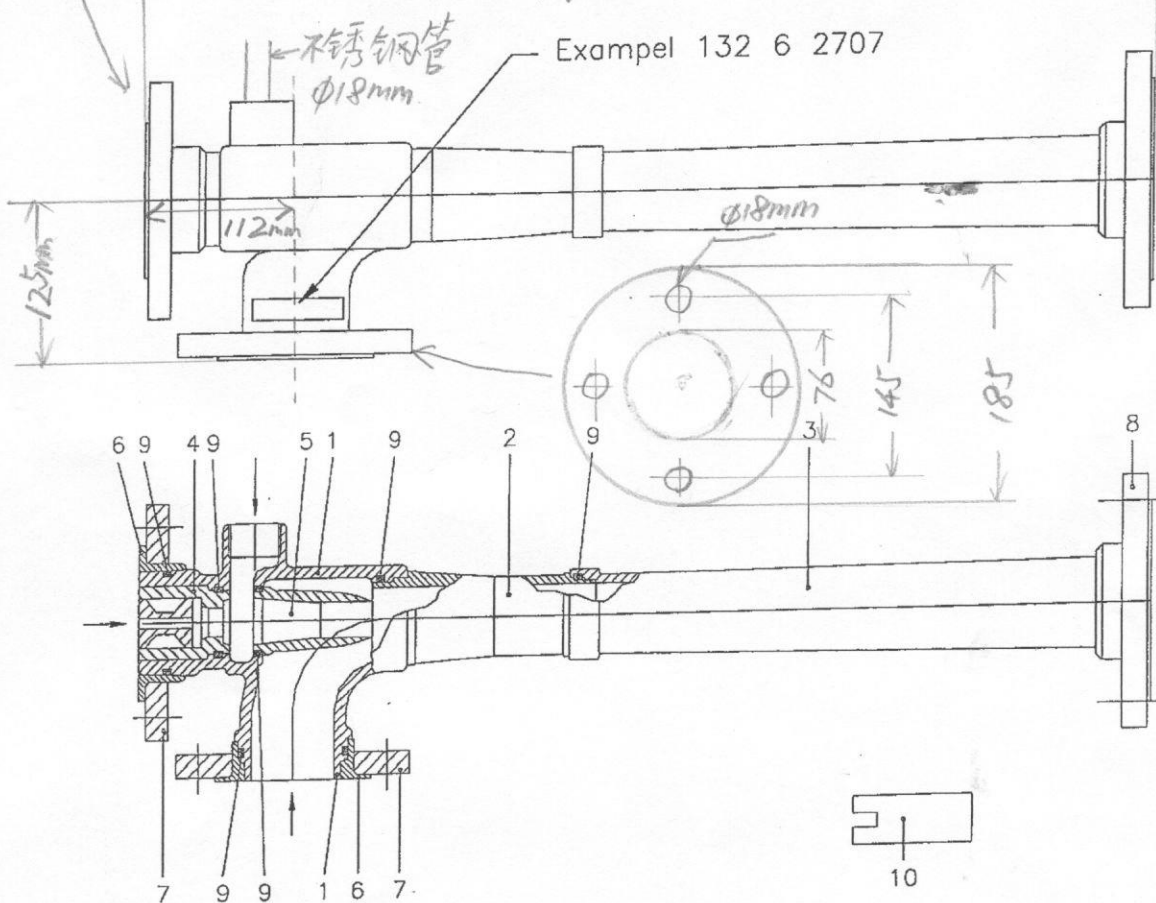

Pos.	Description
1	Head
2*	Mixing passage
3	Diffuser
4	Nozzle
5	Mixing nozzle
9	O-ring (set)
6	Flange bushing
7	Loose flange
8	Loose flange
10	Box spanner

Spare parts nr.		
	1sæt	1sæt